





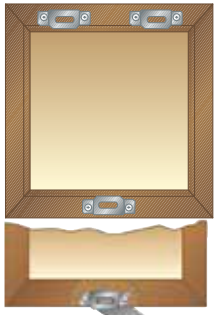










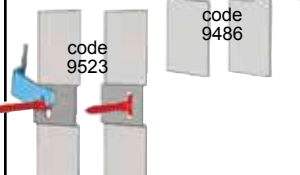


ILLUSTRATION	DESCRIPTION	PACKING	€ per pack.	Discounts Q.ty %	CODE	
	<b>CB212 Security Hanging System.</b> It is made up of two brass steel plates to be fixed by using wood screws to the horizontal or vertical sides of frames. Then the two plates are fixed to walls by wall-screws and dowels.	Kit including: - 2 plates - 2 wall screws - 2 dowels - 4 wall screws	0,85	5 20% 25 35% 100 38%	CB212	
	<b>"Safety Hanger" security system.</b> Locks onto two screws in the wall. Wiggle it until it drops through the S-bends. Adjust sideways to level. The frame feels loose on the wall. Use in pairs. This also helps strenghten the frame. Measure between the vertical slots and fit screws in the wall exactly that distance apart. Screws to be roughly level.	Kit including: - 2 plates - 2 wall screws - 2 dowels - 8 wall screws	1,30	5 20% 25 25% 100 30%	2280	
	<b>"Spring Lock" security fitting system</b> The system consist of <b>Kit A</b> wich includes: • A couple of bridges • A couple of locks • Four screwa to fix the bridges to the frame  To install the SpringLock system to the frame to have to follow these steps: 1) Fit the two bridges to the frame using the screws. 2) On the wall fit two screws in corresponding positions. The kit does not include these screws (for screw see page 24). 3) Frame is offered up and the bridges fitted over the screws in the wall. 4) Locks are pushed home with thumb pressure.	Kit for 1 frame	1,70	10 20% 50 30% 200 40%	SL	
	To remove the frame you need the release tool. It is available in two versions:					
		• Release tool with hanging hole	1 piece	2,50	4 10% 10 15%	SL1
		• Marker Button. Fits into bridge to mark wall for screw.	1 piece	1,20	4 10% 10 15%	5693
		• Release tool with integral marker to mark wall screw.	1 piece	3,30	4 10% 10 15%	7165
	SpringLock <b>Kit B</b> to be used when hanging frames closely side by side. Kit B consists includes: • A couple of Hang Plates to fit at the top of the frame • One bridge to fit on the bottom of the frame. • Six screws • One SpringLock The steps to follow fot the kit B are similar to the steps for the kit A.	Kit for 1 frame	2,00	4 10% 10 15% 50 20%	3943	
	<b>Security Hanging System "AS".</b> It works as follows: 1) Apply 2 horizontal grooved metal plates (pict. A) onto the top of the frame. A third one is placed along the bottom back of the frame. 2) Insert 3 special T-screws (pict. D) into the wall at the same distance of the plates. 3) The frame with the 3 metal plates is fitted over the screws. 4) Tighten the screws by using the special spanner (AS9) until they are vertically positioned. Now the frame is firmly secured and the frame can be removed only by the spanner.	Kit for 1 frame: - 3 plates - 6 screws to fix the plates - 3 T-screws and wall plugs	2,50	5 5% 10 10%	AS	
		Kit for 10 frames: - 30 plates - 60 screws to fix the plates - 30 T-screws with wall plug	11,00	5 5% 10 10%	AS10	
	<b>Security Hanging System "ASW".</b> It uses 2 brackets (picture C) instead of 2 T-screws. The rest of the procedure is the same as described above.	Kit for 1 frame: - 3 plates - 6 screws to fix the plates - 2 brackets - 2 screws with wall plugs - 1 T-screw with wall plug	2,40	5 10% 10 15%	ASW	
	Special spanner for T-screws (has to be ordered apart)	1 piece	1,40	5 20%	AS9	
Single items can be ordered apart:		Plates to be fixed to the back of frames	pack 100 pces	6,80	3 8%	AS1C
		Screws for fixing the plates to frames. Length 13 mm. Diameter 2,9 mm	pack 1000 pces	75,00	3 8%	AS1
		Brackets	pack 100 pces	9,30	3 8%	AS3C
		T-screws. Length 39 mm. Diameter 6 mm.	pack 1000 pces	90,00	3 8%	AS3
		T-screws. Length 39 mm. Diameter 6 mm.	pack 100 pces	16,00	3 8%	AS4C
		Wall plugs for screws	pack 1000 pces	130,00	3 8%	AS4
		for brackets screws (diam. 6) for T-screws (diam. 8)	pack 100 pces	3,00	3 8%	AS7C
		Screws for fixing brackets. Length 38 mm. Diameter 3.3 mm.	pack 100 pces	5,00	3 8%	AS5C
		pack 500 pces	12,00	3 8%	AS6F	
	<b>"Heavy-duty Safety Hook".</b> When fitting, the restraining clip allows the cord, wire or hanger on a frame to slide into the hook. The clip then resists accidental or deliberate removal. Those in the know can remove the frame by lifting and pulling at a certain angle.	pack 20 pces	16,50		9487A	
		pack 20 screws and wall plugs	5,00		9559	
	<b>"HangLock" plates with SpringLock.</b> Self-adhesive steel plates, shaped to take a SpringLock Lock. Apply to steel, di-bond, acrylic, foamed PVC graphic panels or similar to secure them to a wall. No drilling of the panel required. Two SpingLock locks included.		4,00	5 8%	9486	
	<b>"HangLock" plates with "T" screw.</b> Self-adhesive steel plates, shaped to take a T-screw. Apply to steel, di-bond, acrylic, foamed PVC graphic panels or similar to secure them to a wall. No drilling of the panel required. Two T-screws included.		4,00	5 8%	9523	