
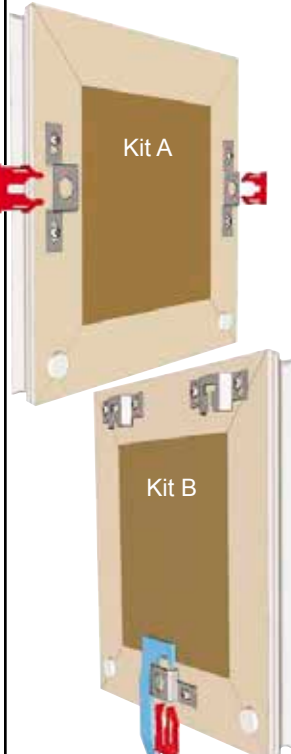



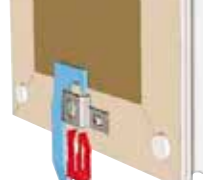
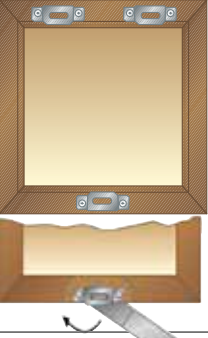












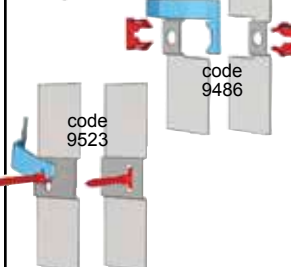


| ILLUSTRATION | DESCRIPTION | PACKING | € per pack. | Discounts Q.ty % | CODE |
|---|--|--|-------------|-----------------------------|-------|
|  | CB212 Security Hanging System. It is made up of two brass steel plates to be fixed by using wood screws to the horizontal or vertical sides of frames. Then the two plates are fixed to walls by wall-screws and dowels. | Kit including: - 2 plates - 2 wall screws - 2 dowels - 4 wall screws | 0,85 | 5 20% 25 35% 100 38% | CB212 |
|  | "Spring Lock" security fitting system The system consist of Kit A wich includes: • A couple of bridges • A couple of locks • Four screws to fix the bridges to the frame To install the SpringLock system to the frame to have to follow these steps: 1) Fit the two bridges to the frame using the screws. 2) On the wall fit two screws in corresponding positions. The kit does not include these screws (for screw see page 24). 3) Frame is offered up and the bridges fitted over the screws in the wall. 4) Locks are pushed home with thumb pressure. | Kit for 1 frame | 1,70 | 10 20% 50 30% 200 40% | SL |
| | To remove the frame you need the release tool. It is available in two versions: | Kit for 25 frames | 26,00 | 5 5% 20 10% | SLF |
| |  • Release tool with hanging hole | 1 piece | 2,70 | 4 10% 10 15% | SL1 |
| |  • Marker Button. Fits into bridge to mark wall for screw. | 1 piece | 1,20 | 4 10% 10 15% | 5693 |
| |  • Release tool with integral marker to mark wall screw. | 1 piece | 3,50 | 4 10% 10 15% | 7165 |
|  | SpringLock Kit B to be used when hanging frames closely side by side. Kit B consists includes: • A couple of Hang Plates to fit at the top of the frame • One bridge to fit on the bottom of the frame. • Six screws • One SpringLock The steps to follow for the kit B are similar to the steps for the kit A. | Kit for 1 frame | 2,00 | 4 10% 10 15% 50 20% | 3943 |
|  | Security Hanging System "AS". It works as follows: 1) Apply 2 horizontal grooved metal plates (pict.A) onto the top of the frame. A third one is placed along the bottom back of the frame. 2) Insert 3 special T-screws (pict. D) into the wall at the same distance of the plates. 3) The frame with the 3 metal plates is fitted over the screws. 4) Tighten the screws by using the special spanner (AS9) until they are vertically positioned. Now the frame is firmly secured and the frame can be removed only by the spanner. | Kit for 1 frame: - 3 plates - 6 screws to fix the plates - 3 T-screws and wall plugs | 2,50 | 5 5% 10 10% | AS |
| | Security Hanging System "ASW". It uses 2 brackets (picture C) instead of 2 T-screws. The rest of the procedure is the same as described above. | Kit for 10 frames: - 30 plates - 60 screws to fix the plates - 30 T-screws with wall plug | 11,00 | 5 5% 10 10% | AS10 |
| |  | Special spanner for T-screws (has to be ordered apart) | 1 piece | 1,40 | 5 20% |
| Single items can be ordered apart: |  Plates to be fixed to the back of frames | pack 100 pces | 7,00 | 3 8% | AS1C |
| |  Screws for fixing the plates to frames. Length 13 mm. Diameter 2,9 mm | pack 1000 pces | 75,00 | 3 8% | AS1 |
| |  Brackets | pack 100 pces | 9,30 | 3 8% | AS3C |
| |  Brackets | pack 1000 pces | 90,00 | 3 8% | AS3 |
| |  T-screws. Length 39 mm. Diameter 6 mm. | pack 100 pces | 16,00 | 3 8% | AS4C |
| |  T-screws. Length 39 mm. Diameter 6 mm. | pack 1000 pces | 130,00 | 3 8% | AS4 |
| |  Wall plugs for screws | for brackets screws (diam. 6) pack 100 pces | 3,00 | 3 8% | AS7C |
|  Wall plugs for screws | for T-screws (diam. 8) pack 100 pces | 5,00 | 3 8% | AS5C | |
|  | Screws for fixing brackets. Length 38 mm. Diameter 3.3 mm. | pack 100 pces | 4,90 | 3 8% | AS6C |
|  | Screws for fixing brackets. Length 38 mm. Diameter 3.3 mm. | pack 500 pces | 12,00 | 3 8% | AS6F |
|  | "Heavy-duty Safety Hook". When fitting, the restraining clip allows the cord, wire or hanger on a frame to slide into the hook. The clip then resists accidental or deliberate removal. Those in the know can remove the frame by lifting and pulling at a certain angle. | pack 20 pces | 16,50 | 5 10% 20 15% | 9487A |
| | | pack 20 screws and wall plugs | 5,20 | 5 10% 20 15% | 9559 |
|  | "HangLock" plates with SpringLock. Self-adhesive steel plates, shaped to take a SpringLock Lock. Apply to steel, di-bond, acrylic, foamed PVC graphic panels or similar to secure them to a wall. No drilling of the panel required. Two SpringLock locks included. | | 4,00 | 5 10% 20 15% | 9486 |
| | "HangLock" plates with "T" screw. Self-adhesive steel plates, shaped to take a T-screw. Apply to steel, di-bond, acrylic, foamed PVC graphic panels or similar to secure them to a wall. No drilling of the panel required. Two T-screws included. | | 4,00 | 5 10% 20 15% | 9523 |